


Frese S

- DK **Montagevejledning**
- DE **Montageanleitung**
- EN **Mounting instructions**
- ES **Instrucciones de montaje**


Danmark · Tlf. +45 58 56 00 00
 Deutschland · Tel. +49 (0)241 475 82 333
 UK · Tel. +44 (0)1704 896012

FIG 1

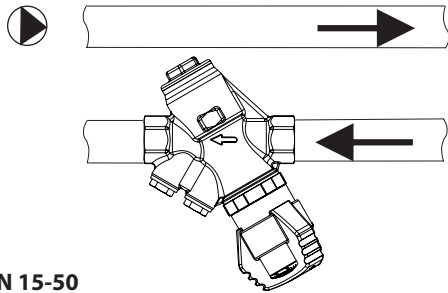

Frese S DN 15-50

FIG 2

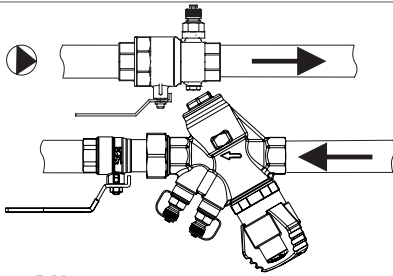

Frese S system DN 15-50

FIG 3



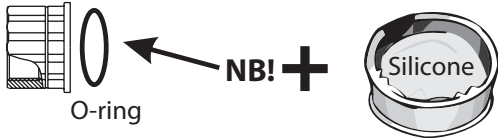



FIG 4

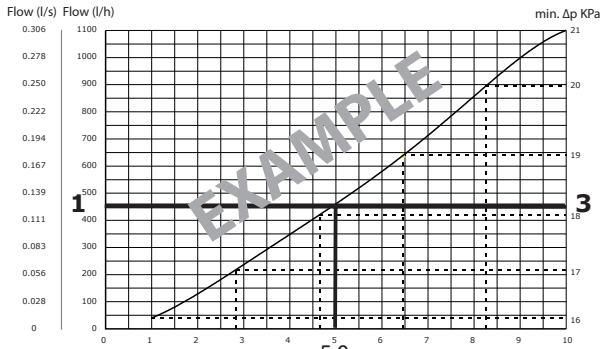


Frese S flow rate graph - DN 15 High Pressure

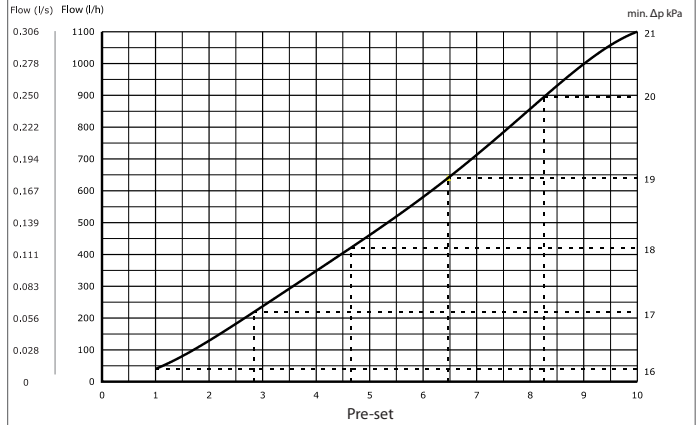


Frese S flow rate graph - DN 20 High Pressure

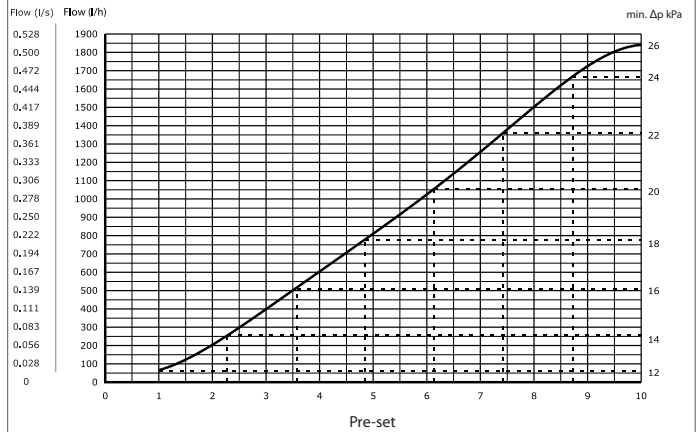


Frese S flow rate graph - DN 25 High Pressure

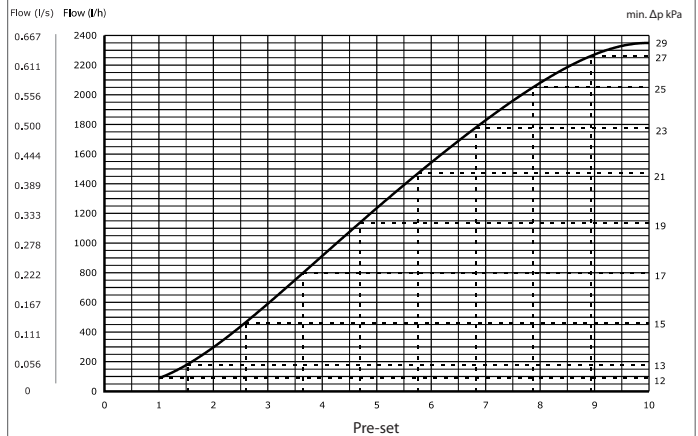


Frese S flow rate graph - DN 32 High Pressure

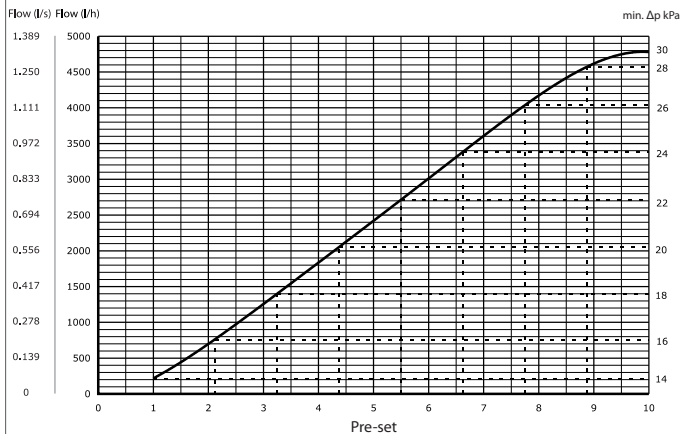


Frese S flow rate graph - DN 15 Low Pressure

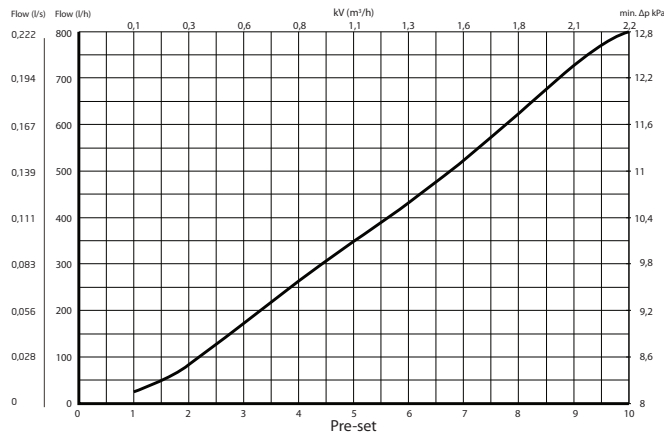


Frese S flow rate graph - DN 40 High Pressure

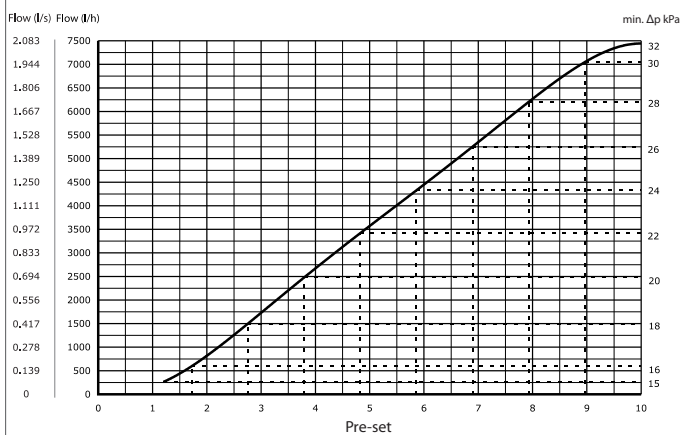

Frese S flow rate graph - DN 20 Low Pressure

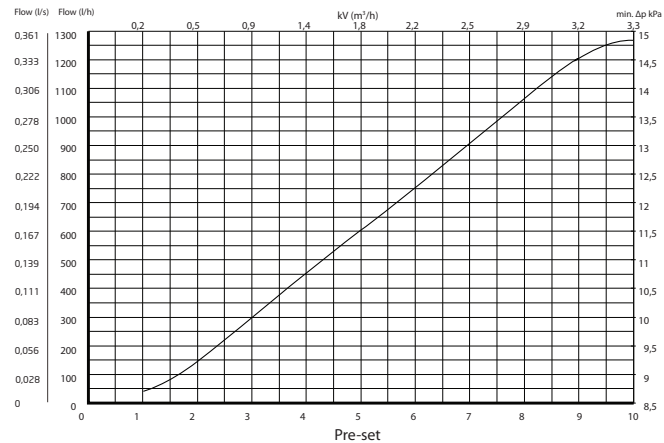

Frese S flow rate graph - DN 50 High Pressure

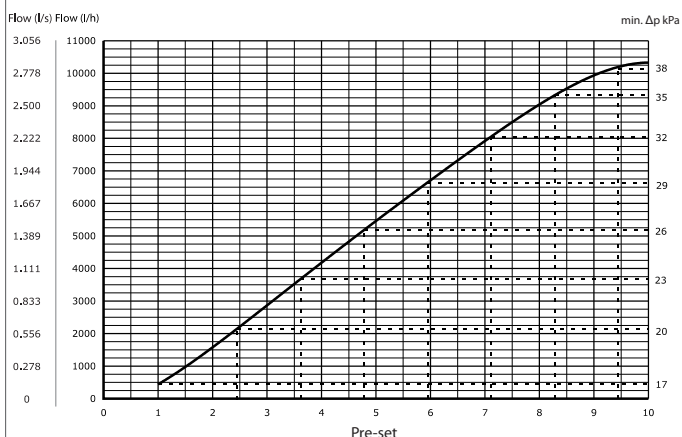

Frese S flow rate graph - DN 25 Low Pressure

